

# RS403K INSTRUCTIONS



TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## BRAKE SIDE EXPLODED VIEW



**INDEX**

-  Lubricate
-  Thread Lock
-  Use Factory Piece

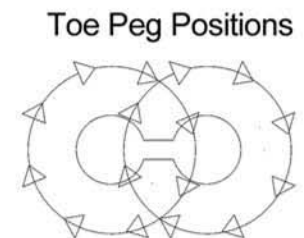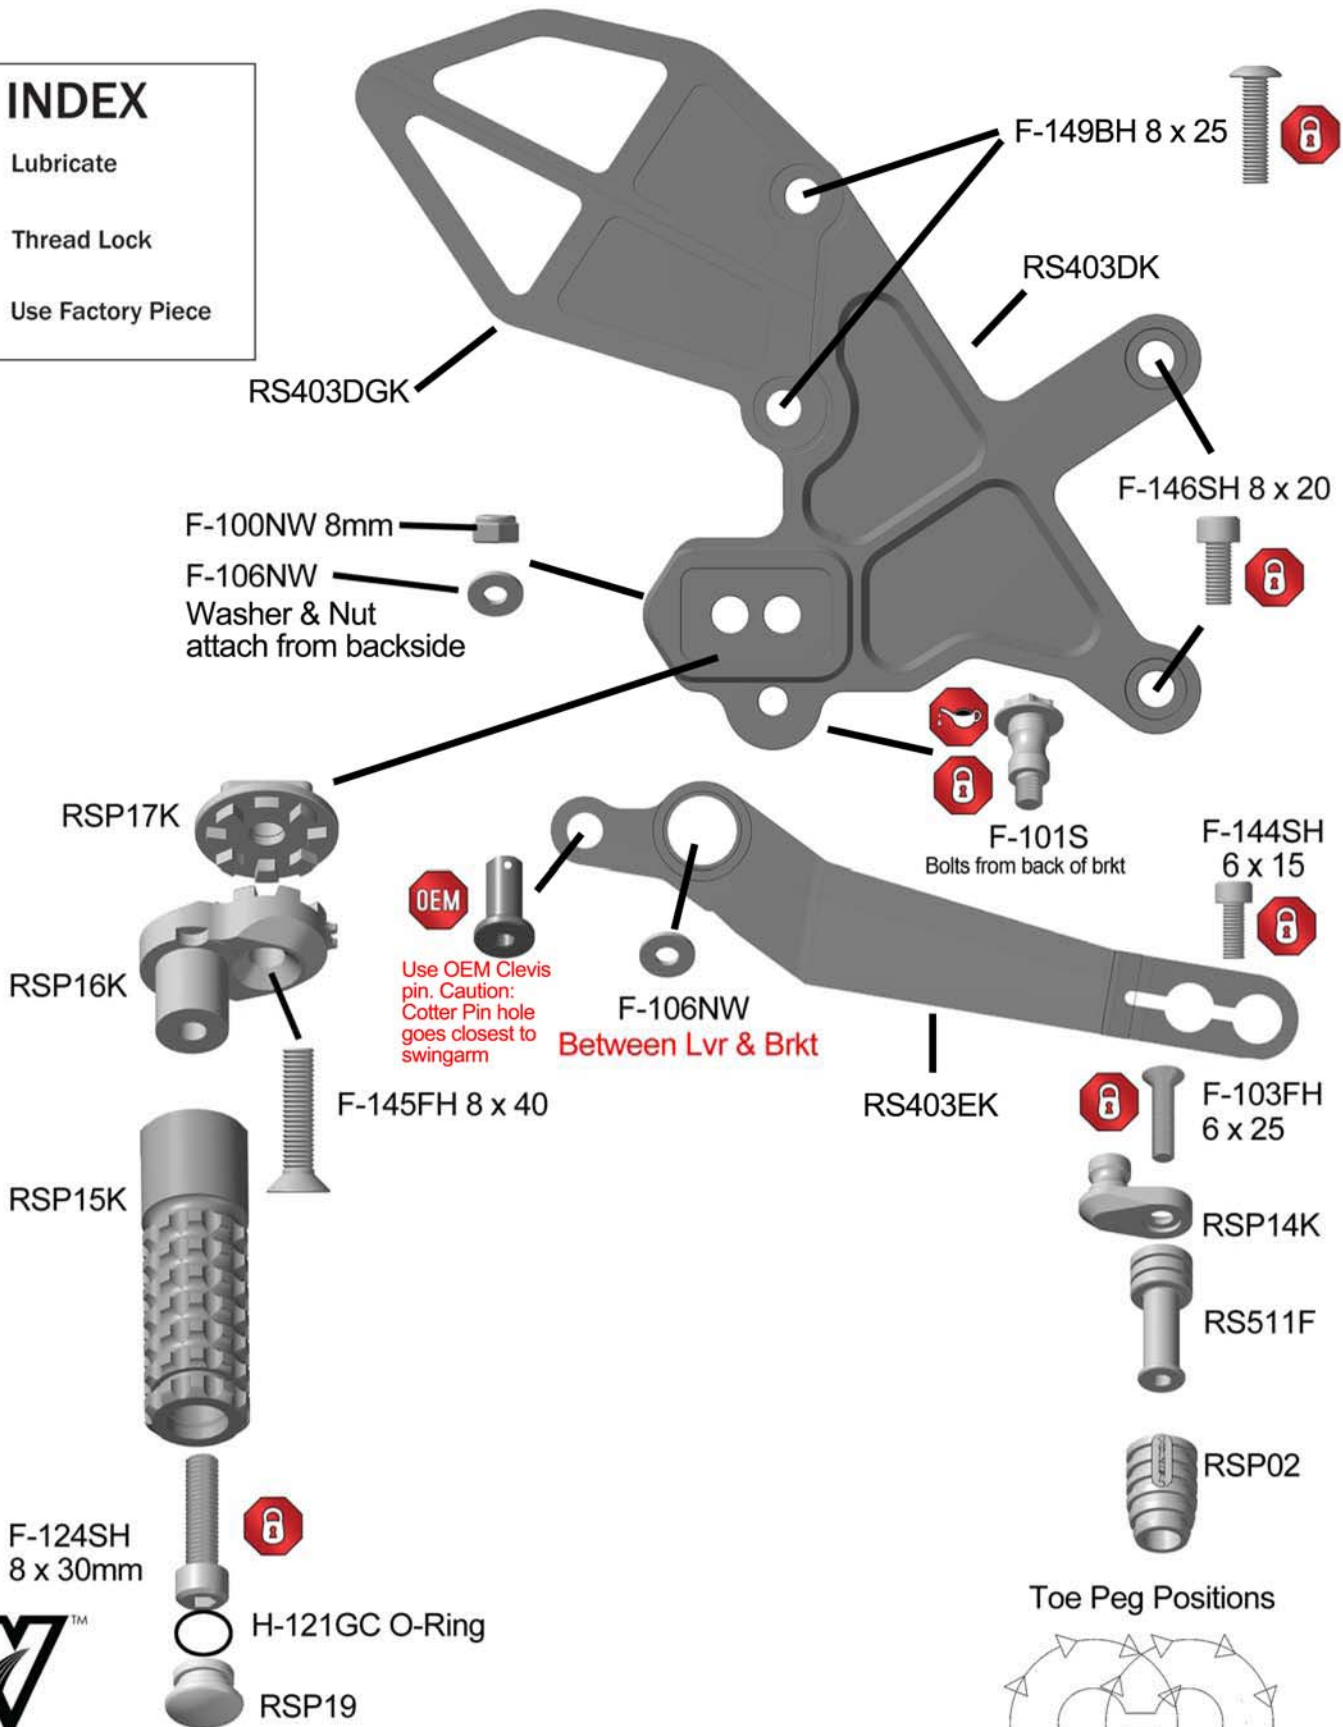

# RS403K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY


## SHIFT SIDE EXPLODED VIEW

### GP Shift



**INDEX**

-  Lubricate
-  Thread Lock
-  Use Factory Piece

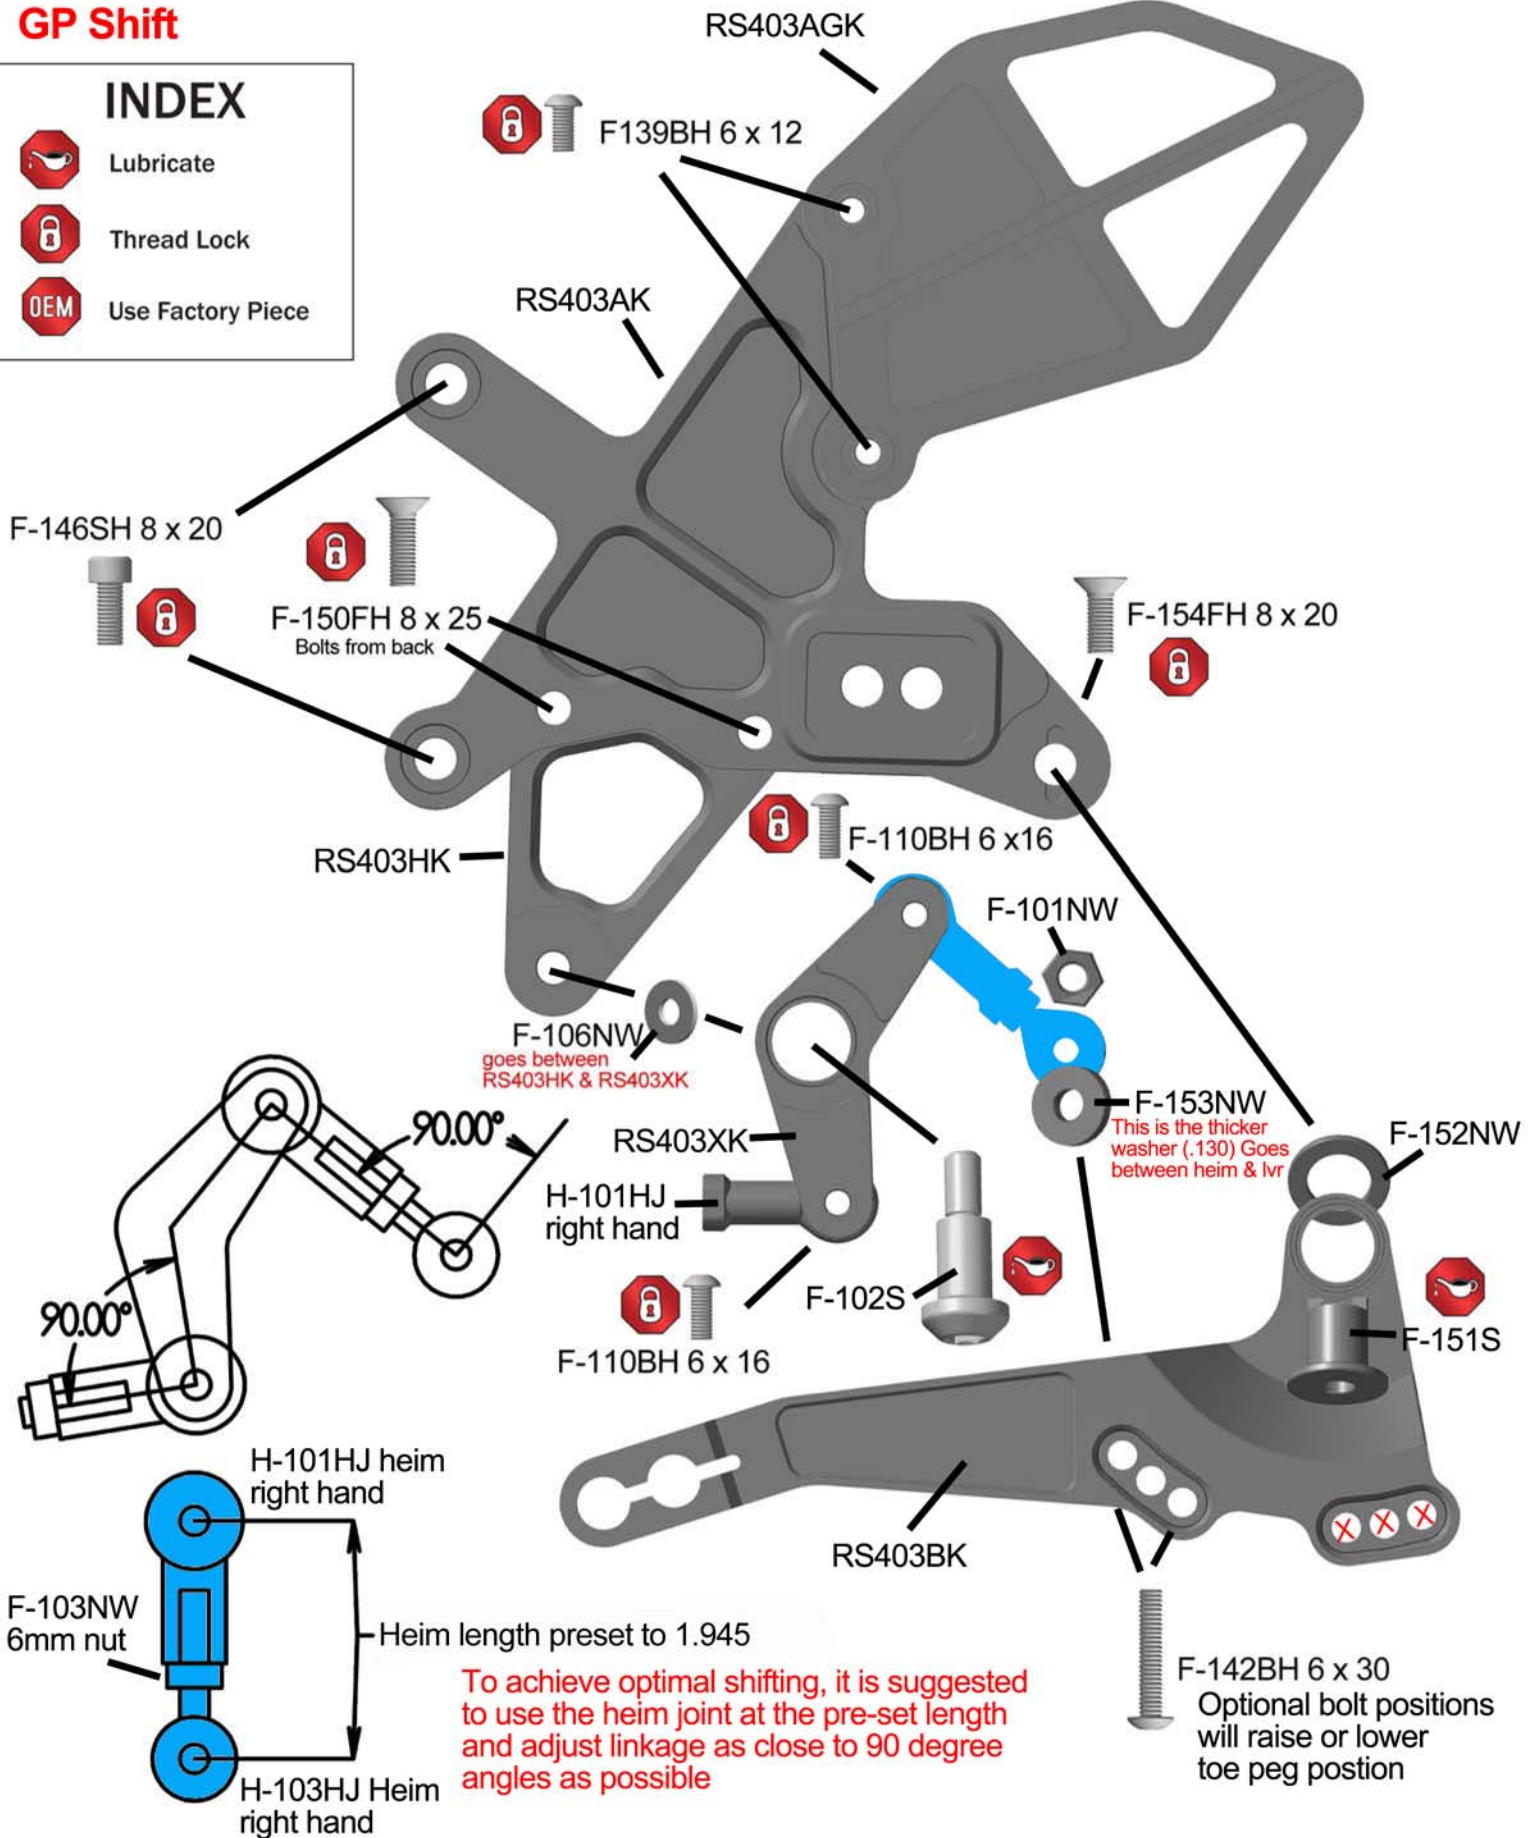

# RS403K INSTRUCTIONS

TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

## SHIFT SIDE EXPLODED VIEW

### Standard Shift



**INDEX**

- Lubricate
- Thread Lock
- Use Factory Piece

