 
RS403KINSTRUCTIONS


TO BE INSTALLED BY A CERTIFIED MECHANIC ONLY | FOR RACE USE ONLY

How to adjust Footpeg positions






 1) Decide which mounting hole in pocket to use.




2) Position #1 at 12 o'clock position for shift and brake. Be sure other numbers are not upside down.

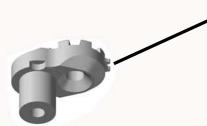

3) Tab reader will indicate which position you are on.

CAUTION - Each number has two positions. Be sure to use the same position for shift and brake side.

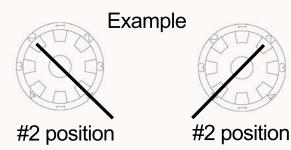

Footpeg positions

